

RIBICRESCUE USER INSTRUCTIONS

1



Remove **RIBICRESCUE** from the shipping container noting the packing as it will be necessary to repack your unit following your fitting adjustments.

2



Place **RIBICRESCUE** on a desk, table, floor or other flat surface with the cable spool face down under the vest as shown.

3



Slip your arms into the vest sleeve openings careful to step over the brake unit keeping it located between your legs.

4



Grasp the brake unit lifting it through & between your legs upward to a position in front of your chest.

5



Connect your vest/harness strap buckles to the 2 eyelets on either side of the brake unit as shown.

6



Remove the Velcro ties from the ends of vest/harness straps. Separate the metal buckle and pull down to loosen the strap or pull the strap end up to tighten.

7



Adjustment of the vest/harness straps should result in the brake unit being located approximately 5 inches directly in front of your chest as shown.

8




Your **RIBICRESCUE** has now been properly fitted & is ready for emergency use.

9




Picture (8) and (9) depict the vest/harness and the braking device correctly located on the user to insure appropriate descent positioning.

10

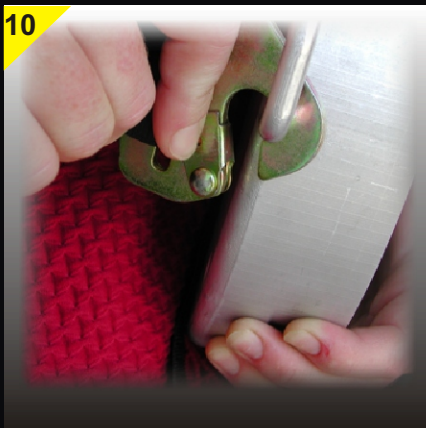

Lift the safety latch & unhook the vest/harness strap buckles from the eyelets as shown.

11

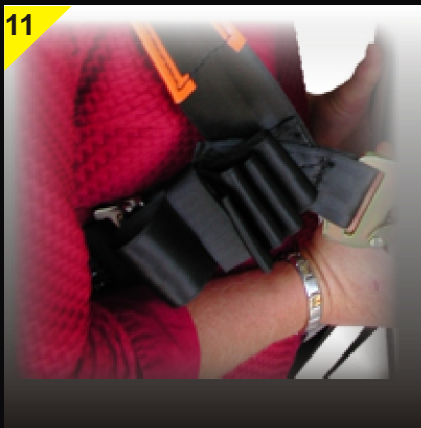

Following final adjustment we recommend you secure the ends of the straps with the Velcro ties as shown.

12



ONLY IN AN EMERGENCY SITUATION

Remove the Velcro retaining strap and unwind the brake device control cable & hand grip control.